



 
E-mail: distributor@hyggeraquarium.com

Website: www.hyggeraquarium.com



HG188 USER MANUAL

hygger Disc Automatic Fish Feeder

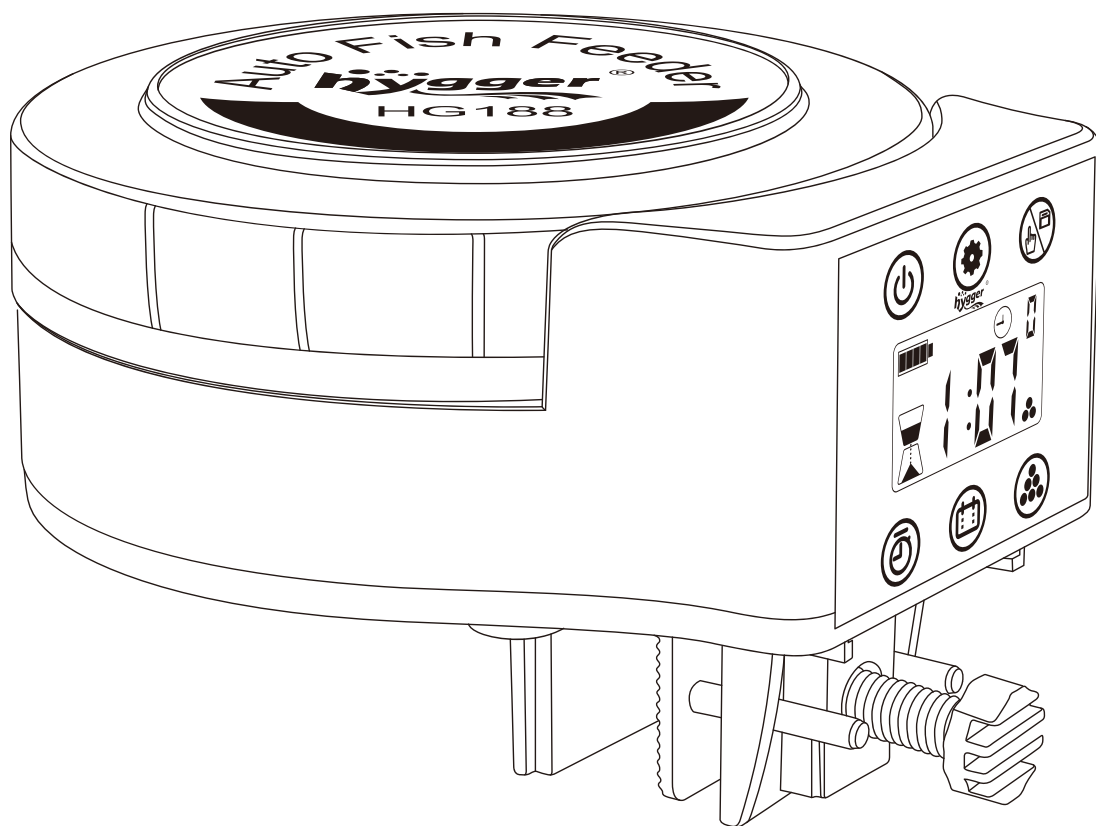

The hygger Disc Automatic Fish Feeder is controlled by an intelligent IC and is suitable for various aquarium sizes. It meets the requirements for daily feeding and transportation over long distances. Please read this user manual carefully before use and keep it for future reference; follow the instructions to ensure proper use.

1. PRODUCT FEATURES

- Built-in 3 No. 5 batteries, no external power supply.
- LCD display: Displays clock and feeding parameters
- You can synchronize the clock with the local time
- Precision feeding size (The maximum capacity of the cell is 7ml)
- Automatic fish feeding is scheduled up to 6 times daily, allowing you to set specific feeding times for each meal
- The amount of food per feeding can be freely adjusted from level 1 to level 9
- The previous feeding Settings are automatically saved after power failure.

2. PRODUCT SPECIFICATIONS


Model	Capacity	Suitable fish tank thickness	Endurance time	Cell capacity
HG188-15Grids	105ml	15mm	≥60 days	7ml
HG188-20Grids	140ml	15mm	≥60 days	

3. FACTORY SET FEEDING TIME

Number of feedings	Feeding time	Food quantity
1	7:00	3
2	12:00	3
3	17:00	3
4	-	-
5	-	-

Please note: " - "means no feeding time is set, each serving size for feeding is standardized to a single unit, known as '1 lattice'.


4. INSTALLATION INSTRUCTIONS

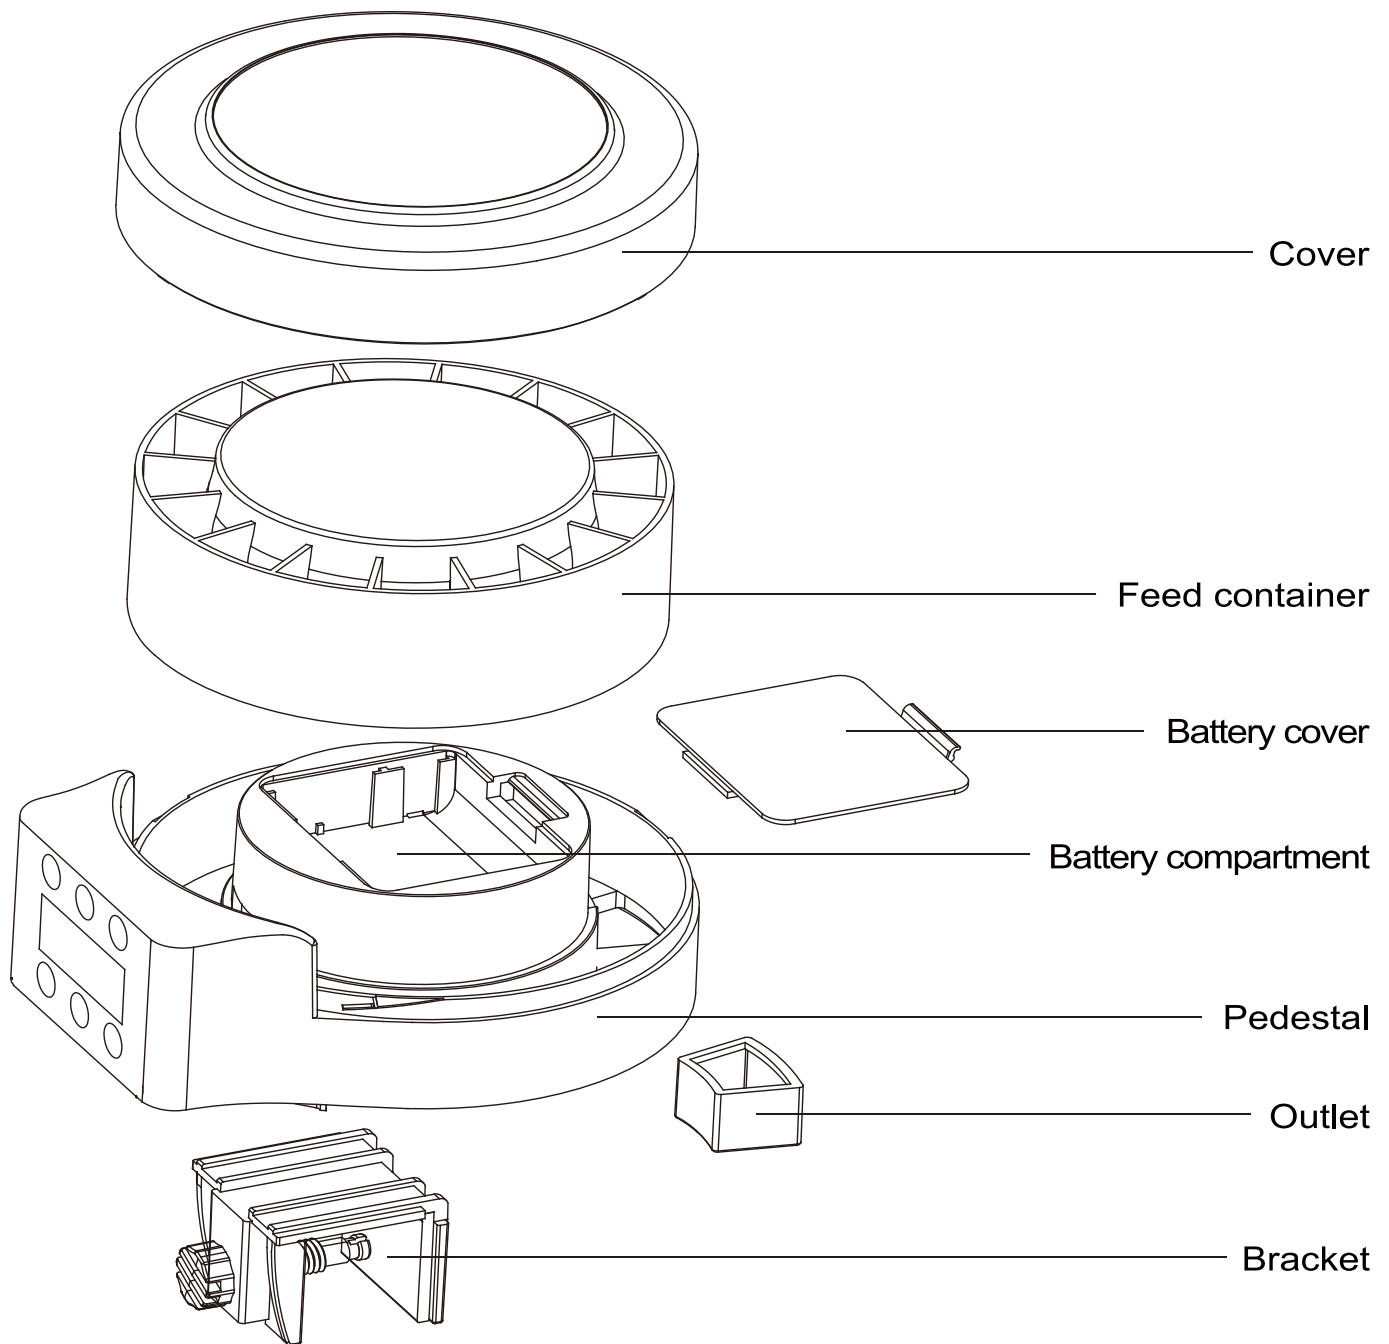

1) Installation:

- ① Install the bracket, and secure the adjustment knob to the aquarium glass edge, suitable for glass up to 15mm thick.
 - ② Install the feeder on the bracket using the suction cups.
- 2) To replace the battery, you need to disassemble the battery compartment.
- 3) Please readjust the local time after installing new batteries.
- 4) Open the hopper's top cover and pour in the feed.

5. CONTROL PANEL

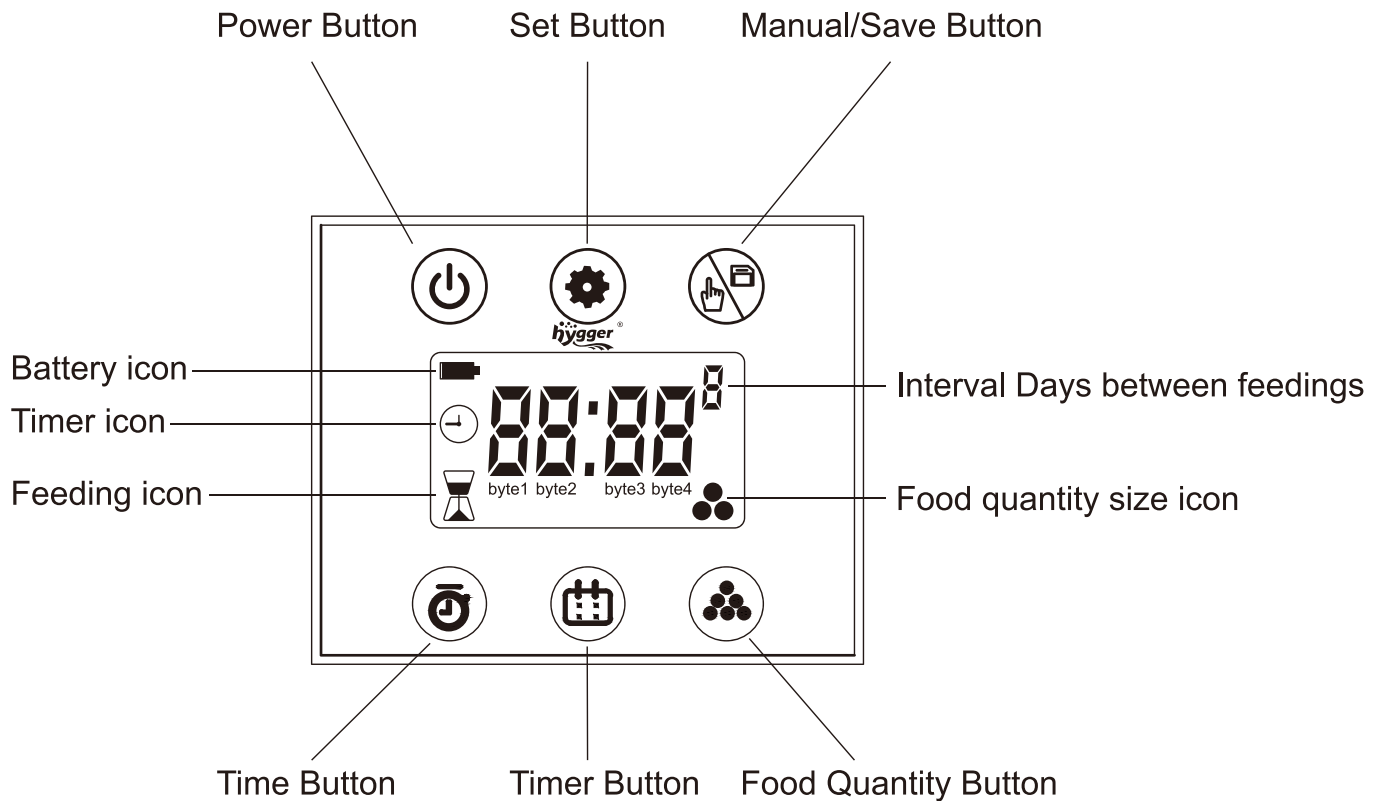


6. INSTRUCTIONS FOR USE

1) Turn On


⏻ Power button: Install the battery and press the power button to start setting the feeder.

2) Local Time Setting

- ① Press "⌚" and then press "⚙️" to enter the time setting interface, and the four-digit display will flash.
- ② Press "⌚" to set the hour, and press "📅" to set the minute.
- ③ After the setting is complete, press "🚫" to save and exit the menu to return to the main interface.
- ④ Press "⌚" once in normal mode to check the set time.

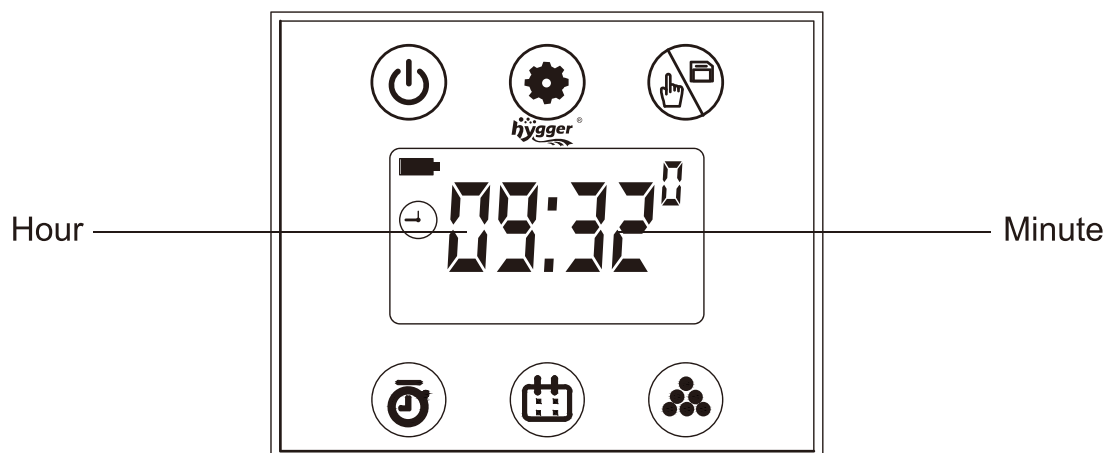

3) Feeding Time Setting

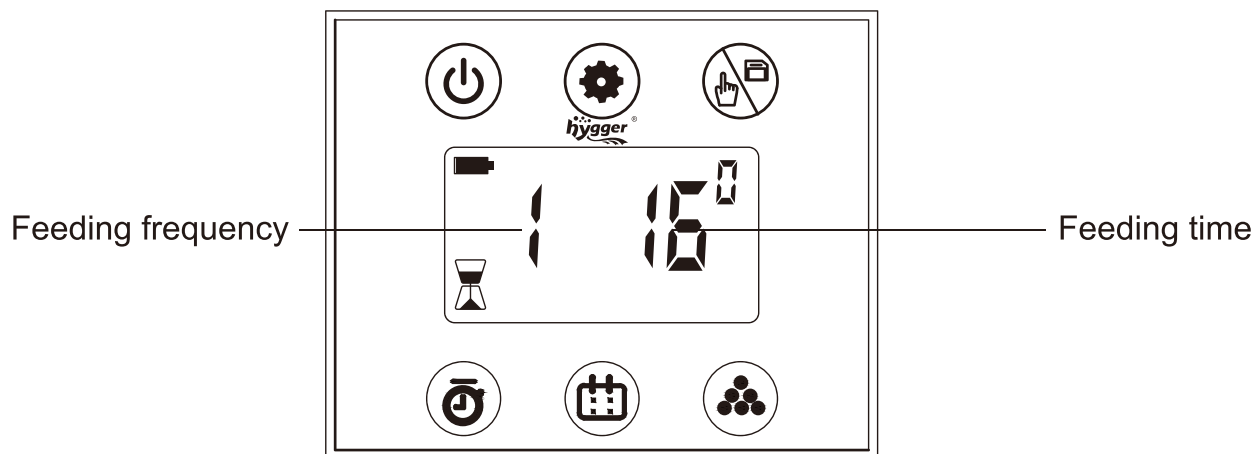


- ① Press "📅" to enter the feeding time setting interface.
- ② Press "⚙️" to set the feeding time for the first meal, and the two-digit display will flash ("--" indicates no feeding).
- ③ Press "📅" to set the hour, then press "⚙️" to set the feeding time for the next meal.
- ④ After setting, press "🚫" to save.
- ⑤ Press "📅" once in normal mode to check the feeding time set.

Please Note:

- ① Feeding time is on the hour.
- ② Up to 6 feeding times can be set.
- ③ Please set the feeding time clockwise.


4) Food Quantity Setting

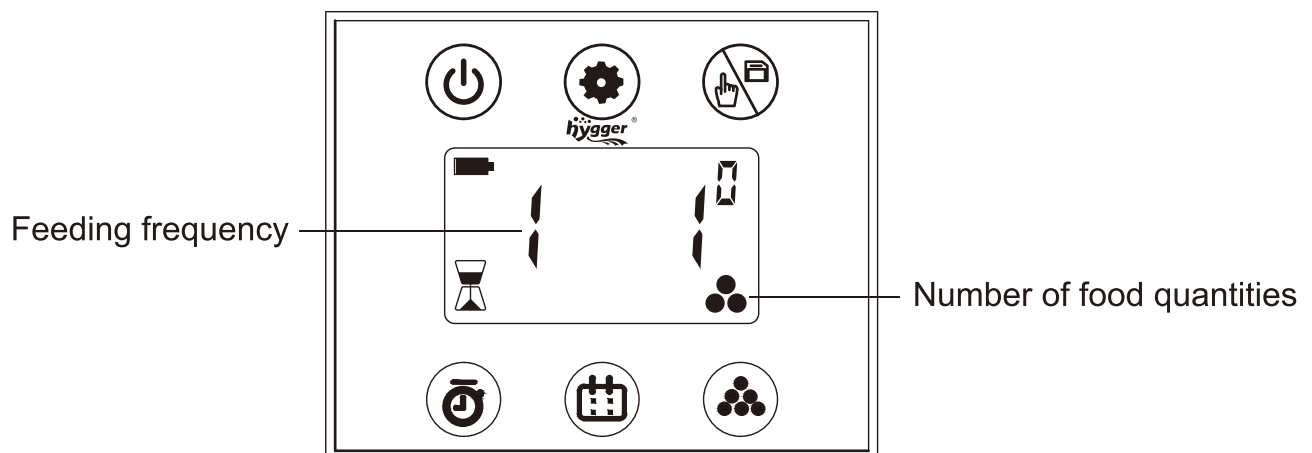

- ① Press "🍲" button to enter the interface to display the food quantity of each meal, the last digit on the screen will flash. Then, press "⚙️" button to enter the interface for setting the food quantity for each meal.
- ② Press "🍲" to set the food quantity for each meal, you can set up to 9 lattice food quantities and then press "⚙️" to set the next meal.
- ③ After setting, press "🚫" to save the setting and exit the menu.
- ④ Press "🍲" once in normal mode to check the food quantity Set.

Please Note: Each serving size for feeding is '1 lattice,' '-' means no feeding time is set.

5) Feeding Interval Setting

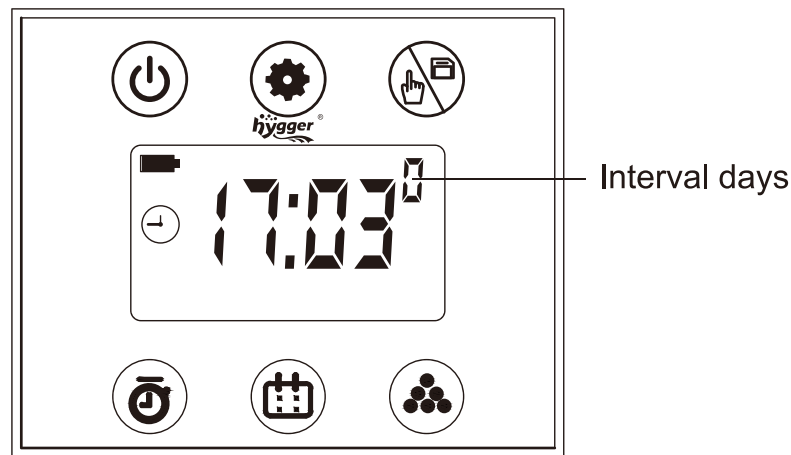

Press and hold "⚙️" for 3 seconds, and "Interval Days between feedings" will flash. Each time you press "⚙️", the value increases by 1 unit. The default setting is "0", and the interval can be set up to "7" days.

6) Manual Feeding


Press 🕒 to manual feeding in standby mode, each serving size for feeding is standardized to a single unit, known as 1 lattice

The interface shows "----" for one hour after a single daily meal, indicating that no more feedings are scheduled for today.

Please Note: If the feeder is dormant, press and hold 🕒 for 3 seconds to wake it up when you need to feed manually.

7. MAINTENANCE

1. This product is designed for indoor use only and should not be submerged in water.
2. When refilling fish food, clean out any residual powder from the container to prevent the Feed container from getting stuck due to moisture.
3. Clean and dry the food container regularly, ideally at least once a month, to prevent feed from clumping.
4. Do not rinse the food container with water.
5. Avoid touching the buttons with wet hands.

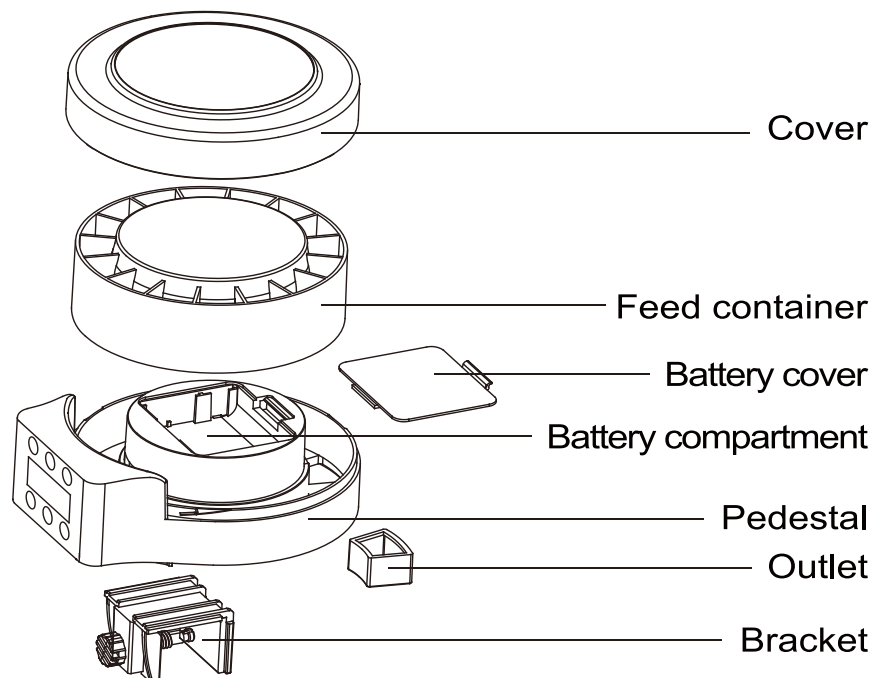

8. TROUBLESHOOTING

Problem	Reason	Solution
No display on control panel	Low battery	Replace the battery
	Internal connection cable is loose	Open the battery compartment and reinstall it
	The switch is off	Turn on the switch
Display but no response	The feed container gets stuck	Clean the feed container

9. HYGGER LIMITED MANUFACTURER'S WARRANTY

We offer the end user of this product a manufacturer warranty of 3 (2) years from the date of sale if this product was purchased from a hygger®-authorised specialist dealer.

Retain receipt for any future warranty claim. Conditions apply. Products are guaranteed by hygger® Aquatic Supplies to the original purchaser against defective material and workmanship under normal use for a period up to 3 (2) years from the date of the original purchase through an Authorized Dealer. Refer to the User Manual included with your product for specific warranty details.

Products have no warranty if:

- 1.) The product has been serviced, modified or tampered with by anyone other than hygger® Aquatic Supplies.
- 2.) The product has been abused or damaged (including broken or cracked bulbs), and/ or.
- 3.) The product has been transported without proper packaging.
- 4.) The product was purchased from an Unauthorized Reseller.

WARRANTY LIABILITY DISCLAIMER:

In no event will hygger® be liable for any consequential or incidental damages, including but not limited to, lost aquatic life, personal injury, property damage, equipment damage, lost profits, lost wages, lost savings, lost income, etc., arising out of the use of any hygger® products.

1.0 Terms and Conditions of Warranty.

- 1.1 hygger® warrants to the purchaser, for 3 (2) years from date of original purchase through an Authorized hygger® Reseller, free to repair or replace parts where fault is found due to defective materials or faulty workmanship and where goods do not operate in accordance with the instructions.
- 1.2 All claims for repair or replacement must be made at place of purchase.
- 1.3 Only the direct purchaser is entitled to warranty claims against us and these are not transferable without our consent.
- 1.4 The original and dated Proof of Purchase (receipt) must be supplied with all goods claims. Please also provide this Guarantee where possible.
- 1.5 Wear parts (e.g.: seals, suction devices, axes, pump wheels, light sources, pH electrodes, filter media, such as filter cartridges, as well as UVC burners), glass damage and the opening of the product, as well as structural changes or the use of non-hygger® original parts are excluded from the guarantee.

- 1.6 All goods subject to claim under Guarantee should be prepared for transportation in the original packaging or other comparable packaging which offers the same degree of protection and hygger® must incur no costs from the shipment.
- 1.7 Where claims on inspection reveal goods are in normal working order, hygger® will request reimbursement of all reasonable costs incurred.
- 1.8 Warranty claims do not exist in the case of only insignificant deviations from the agreed or customary condition or usability, e.g. insignificant deviations in colour, dimensions and/or quality or performance characteristics of the products.
- 1.9 Our warranty obligation extends only to the delivery of newly manufactured products. Unless otherwise agreed, used products are sold as seen, excluding any warranty.

For more warranty information, please see the hygger website.

10. DISPOSAL

Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. This product has to be disposed of at an authorized place for the recycling of electrical and electronic appliances rather than being disposed of together with the domestic waste. Collecting and recycling waste is a way of saving natural resources. So, please consult with your local seller to make sure the product is disposed of in an environmentally friendly way.



11. PACKING LIST

- 1 x Fish food container
- 1 x Scoop
- 3 x Size 5 battery
- 1 x Bracket
- 1 x User manual

12. CONTACT INFORMATION

Distributed by: Hygger Aquarium, Inc.
13941 Magnolia Ave, Chino, CA 91710

E-mail: distributor@hyggeraquarium.com
Website: www.hyggeraquarium.com

Trademarks of Shenzhen Mago Trading Co., Ltd
Bantian Group Business Center, Longgang,
Shenzhen City, China
All Rights Reserved

Made in China



Have a question?
We're here to help:
USA Call: +1 (909) 590-2880
Mon-Fri: 9:00 am - 5:30 pm PST Sat-Sun: Closed

EC

REP

Company: E-CrossStu GmbH
Address: Mainzer Landstr.69,60329
Frankfurt am Main
E-mail: e-crossstu@outlook.com
Tel: +49 69332967674

UK

REP

CET Product Service Ltd.
Beacon House Stokenchurch Business
Park,Ibstone Rd,Stokenchurch
High Wycombe HP14 3FE UK
info.cetservice@gmail.com
+447419325266



MADE IN CHINA