




E-mail: distributor@hyggeraquarium.com

Website: www.hyggeraquarium.com



HZ020 USER MANUAL

Hygger zoo Detachable Reptile Glass Tank

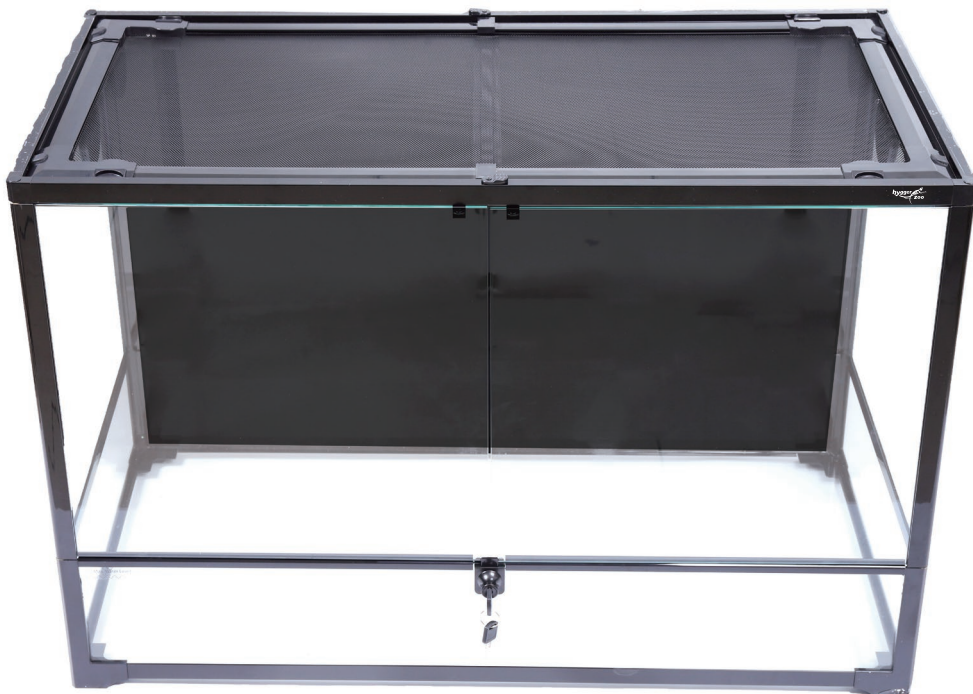

Hygger zoo Detachable Reptile Glass Tank is ideally designed for reptiles, it adopts HD durable tempered glass and features clear and high light transmittance. The front-opening door design is for easy cleaning and feeding. The tank is strong and lightweight, and it is easy to assemble. The silicone seal on the bottom improves the structural strength. Fits the different needs of reptiles, according to different environments to switch landscapes. Suitable for pets: Bearded dragons, chameleons, turtles, snakes, frogs, salamanders, etc. Provide a spacious and comfortable living environment for your reptile or amphibian.

5.PACKAGE INCLUDES

HZ020-60-60	HZ020-60-75	HZ020-90-45	HZ020-90-60	HZ020-120-45	HZ020-120-60
Pre-built Bottom Frame x 1	Pre-built Bottom Frame x 1	Pre-built Bottom Frame x 1	Pre-built Bottom Frame x 1	Pre-built Bottom Frame x 1	Pre-built Bottom Frame x 1
Steel Pipe x 4	Steel Pipe x 4	Steel Pipe x 4	Steel Pipe x 4	Steel Pipe x 4	Steel Pipe x 4
Profile x 2	Profile x 3	Profile x 3	Profile x 3	Profile x 3	Profile x 3
Glass Door x 2	Glass Door x 2	Glass Door x 2	Glass Door x 2	Glass Door x 2	Glass Door x 2
Glass Panel x3	Glass Panel x4	Glass Panel x4	Glass Panel x4	Glass Panel x4	Glass Panel x4
Pre-built Mesh Screen Top Cover x1	Pre-built Mesh Screen Top Cover x1	Pre-built Mesh Screen Top Cover x1	Pre-built Mesh Screen Top Cover x1	Pre-built Mesh Screen Top Cover x1	Pre-built Mesh Screen Top Cover x1
Plastic Cable Pass x 2	Plastic Cable Pass x 2	Plastic Cable Pass x 2	Plastic Cable Pass x 2	Plastic Cable Pass x 2	Plastic Cable Pass x 2
Screw x 4	Screw x 4	Screw x 4	Screw x 4	Screw x 4	Screw x 4
Plastic Plug x 4	Plastic Plug x 4	Plastic Plug x 4	Plastic Plug x 4	Plastic Plug x 4	Plastic Plug x 4
Glass Door Lock Set x1	Glass Door Lock Set x1	Glass Door Lock Set x1	Glass Door Lock Set x1	Glass Door Lock Set x1	Glass Door Lock Set x1
Plastic Door Handle x2	Plastic Door Handle x2	Plastic Door Handle x2	Plastic Door Handle x2	Plastic Door Handle x2	Plastic Door Handle x2
User Manual x 1	User Manual x 1	User Manual x 1	User Manual x 1	User Manual x 1	User Manual x 1

① HZ020-60-60




② HZ020-60-75, HZ020-90-45, HZ020-90-60, HZ020-120-45, HZ020-120-60



1.PRODUCT PARAMETERS

Model	Height of base	Size of tank (length*width*height)	Capacity of tank(Gallon)
HZ020-60-60	7 in	24*18*24 in	45 gal
HZ020-60-75	9.5 in	24*18*30 in	56 gal
HZ020-90-45	4.2 in	36*18*18 in	50 gal
HZ020-90-60	7 in	36*18*24 in	67 gal
HZ020-120-45	4.2 in	48*18*18 in	67 gal
HZ020-120-60	7 in	48*18*24 in	89 gal

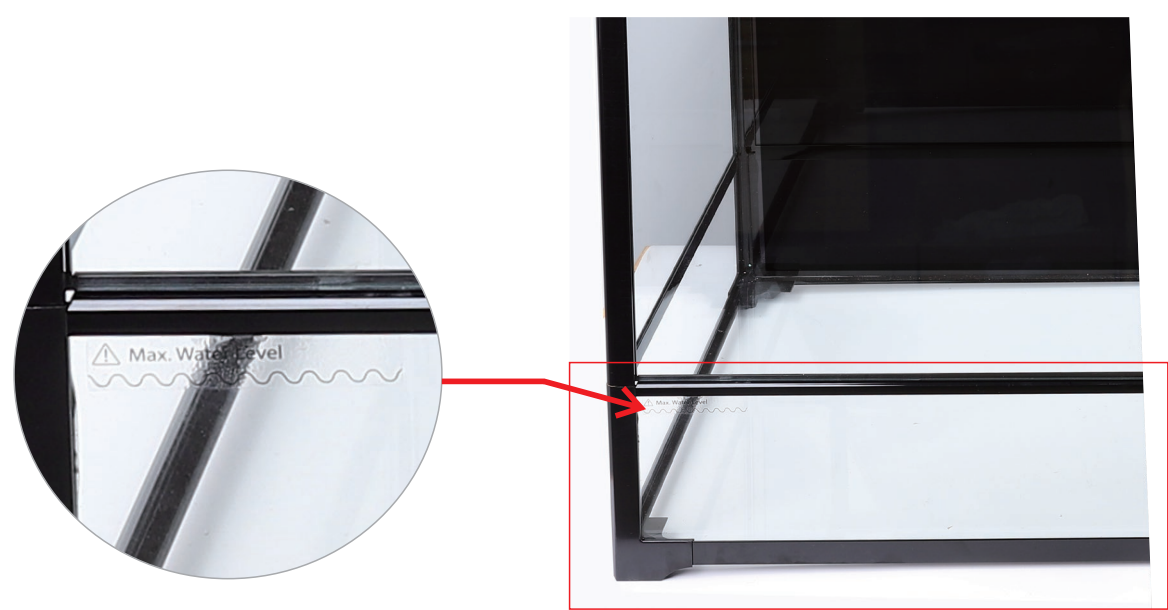

Note: The height of base is shown in the figure above.

2.PRODUCT FEATURES

- **High-quality:** Premium aluminum alloy cylinder frame with excellent wear and corrosion resistance. The 5mm high-transparency tempered glass is sturdy, durable, and scratch-resistant. The ventilation mesh is spray-coated with high-temperature baked paint, providing rust-proof and heat-resistant properties.
- **Full View Experience:** Ultra-clear tempered glass allows you to effortlessly view your beloved pets.

- **Easy to Maintain:** The front-opening door design with handle, easy to open and close, convenient for cleaning and feeding.
- **Wide Applicability:** Compatible with various reptile accessories and equipment. Suitable for diverse pet habitats, including aquatic, terrestrial, desert, and rainforest environments, as well as landscape design purposes.
- **Safety and Reliable:** The front door with a knob lock can be opened separately to prevent pets from escaping. The silicone-sealed base enhances structural strength and waterproofing. The overall structure is sturdy and lightweight, easy to assemble and disassemble.

3.INSTRUCTIONS FOR INSTALLATION

Part 1 Ready to work

- 1) Ensure the operation is on packaging paper or cardboard to avoid glass damage.
- 2) Check the tank for any damage.


Part 2 Installation steps



1) Unpack and find the base support cylinder (as shown).



2) Align the 4 connecting steel pipes with the four corners of the base support cylinder and tighten them (as shown).

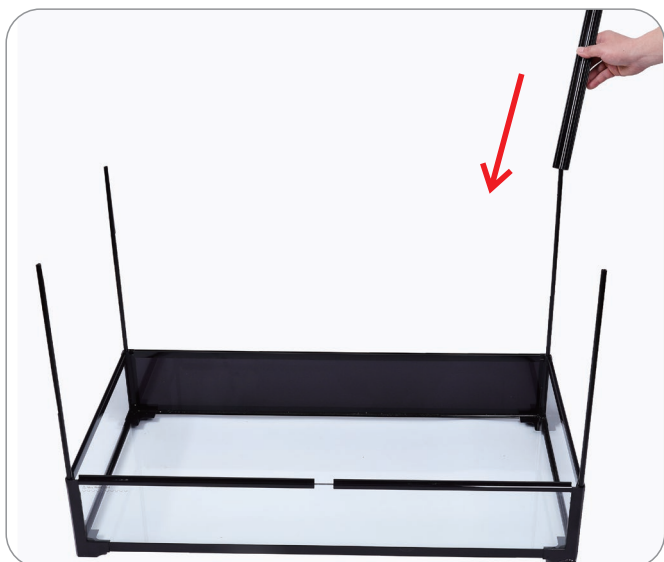


3) Insert the two profiles into the rear connecting steel pipes respectively(as shown).



4) Insert the glass door into the front connection steel pipes respectively (the base support cylinder with knob lock is the front.) (as shown).


5) Insert the left and right glass into the profile slots respectively (as shown)

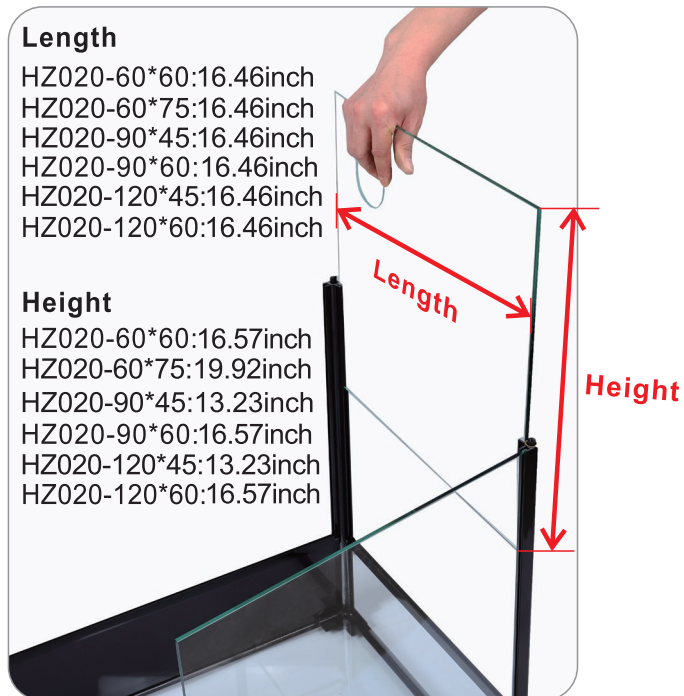

6) Install the rear glass panels (Note: Find the corresponding specification for installation)


① HZ020-60-60

Install the rear glass panels, and insert it into the profile slots. (as shown).

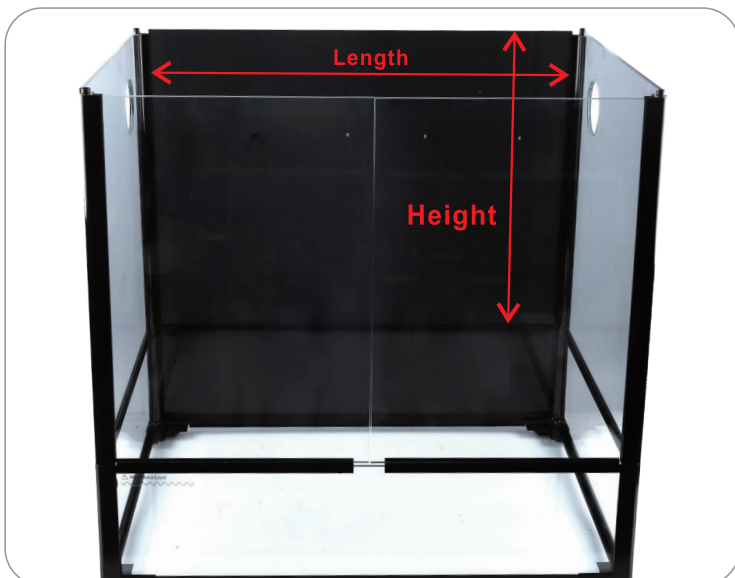


Length **Height**
 HZ020-60*60:22.2inch HZ020-60*60:16.57inch

② HZ020-60-75、HZ020-90-45、HZ020-90-60、HZ020-120-45、HZ020-120-60
 Install the 2 rear glass panels and insert them into the profile slots. (as shown).

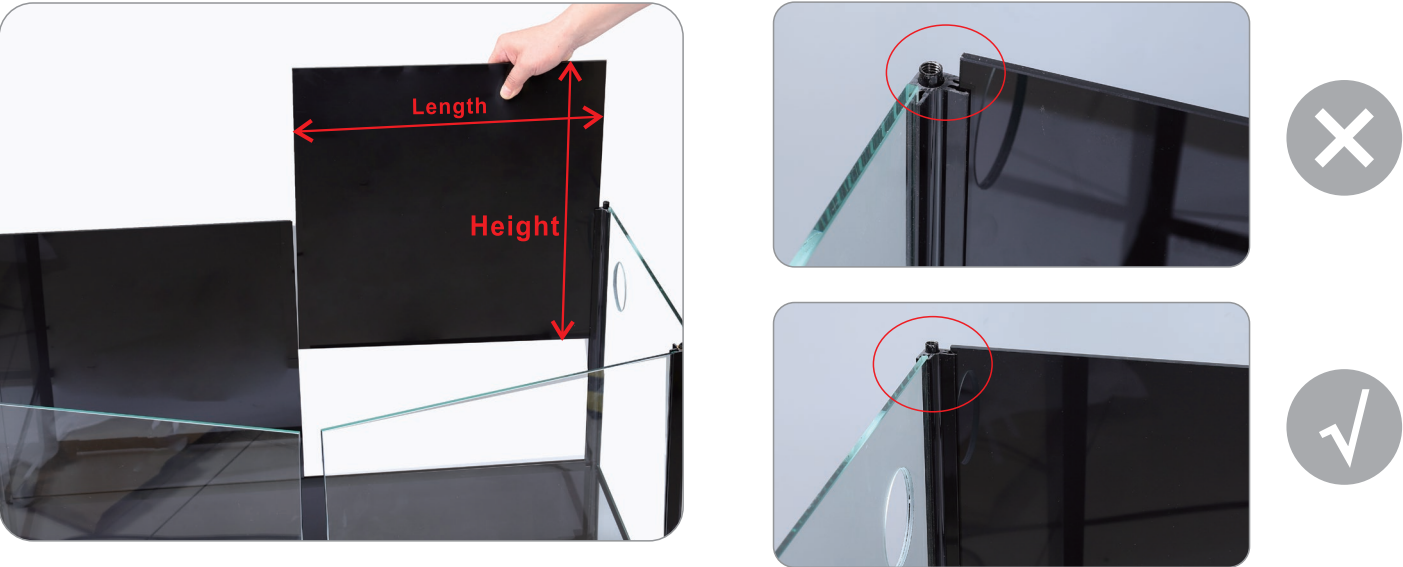

Length	Height
HZ020-60*75:11.06inch	HZ020-60*75:19.92inch
HZ020-90*45:16.97inch	HZ020-90*45:13.23inch
HZ020-90*60:16.97inch	HZ020-90*60:16.57inch
HZ020-120*45:22.87inch	HZ020-120*45:13.23inch
HZ020-120*60:22.87inch	HZ020-120*60:16.57inch


Install the connecting profile to secure the rear glass panels.

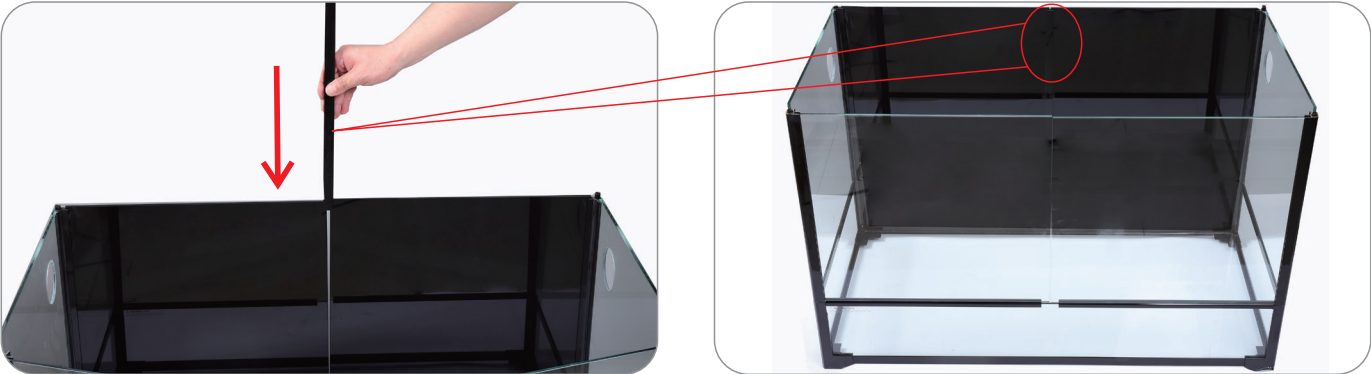

7)Install the plastic cable pass (as shown).



8) Install the top cover for the glass tank/pre-built mesh screen (the protruding part of the top cover is the front, facing the door opening direction) (as shown)

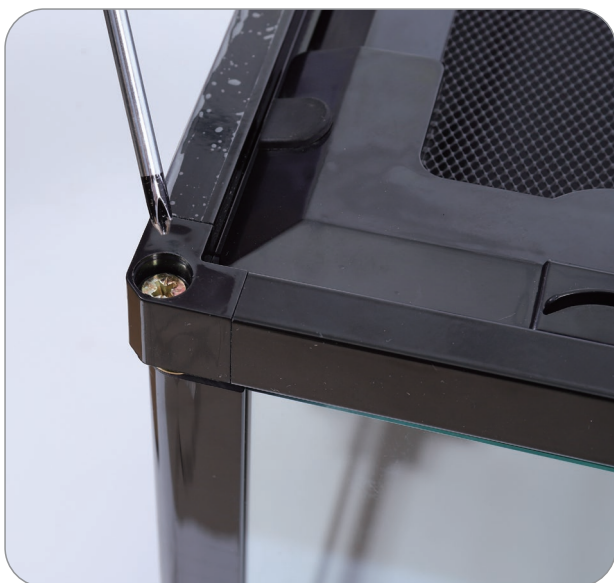

9) Install the plastic door handle (as shown).



10)Install the glass door lock set (as shown).



11)Installation is completed. (as shown)



4.ATTENTIONS

- This reptile tank is made of tempered glass and can not be strongly impacted with metal or hard objects to avoid damage.
- The base support cylinder is sealed and waterproof, and the water can not exceed the water level.
- Install the reptile equipment according to the height of the tank, it is recommended to be about 12-18 inches from the bottom of the tank.

6.DISPOSAL

Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. This product has to be disposed of at an authorized place for the recycling rather than being disposed of together with the domestic waste. Collecting and recycling waste is a way of saving natural resources, and make sure the product is disposed of in an environmentally friendly way.



7.ONE YEAR LIMITED WARRANTY

For this product, Hygger zoo offers one-year guarantee for free. If you discover a defect, please contact Hygger zoo, who will, at its option, repair or replace the product at no charge, provided that you return it during the warranty period.

A copy of the bill of sale is required as proof of the original purchase date if the product needs repairs within the warranty period. Hygger zoo One-year Limited Warranty does not cover damage caused by the following:

1. Artificial damage
2. Improper use or maintenance
3. Modifications or repairs without the written permission of Hygger zoo

If you have any other questions regarding warranty service or product use, please contact us at service@hyggerzoo.com upon presentation of proof of purchase and product information, and we will solve the problem for you as quickly as possible.

We reserve the right of final interpretation regarding the warranty coverage of this product.

8.CONTACT INFORMATION

Distributed by:Hygger Aquarium, Inc.
13941 Magnolia Ave, Chino, CA 91710

E-mail: distributor@hyggeraquarium.com
Website: www.hyggeraquarium.com

Trademarks of Shenzhen Mago Trading Co.,Ltd
Bantian Group Business Center,Longgang,
Shenzhen City, China
All Rights Reserved



MADE IN CHINA